

Modulating rotary actuator fail-safe for adjusting dampers in technical building installations

- Air damper size up to approx. 6 m<sup>2</sup>
- Torque motor 30 Nm
- Nominal voltage AC/DC 24 V
- Control modulating 2...10 V
- Position feedback 2...10 V



### **Technical data**

octrical	4040

Nominal voltage	AC/DC 24 V
Nominal voltage frequency	50/60 Hz
Nominal voltage range	AC 19.228.8 V / DC 21.628.8 V
Power consumption in operation	7 W
Power consumption in rest position	4.5 W
Power consumption for wire sizing	12 VA
Connection supply / control	Cable 1 m, 4 x 0.75 mm² (halogen-free)
Parallel operation	Yes (note the performance data)
-	20 N

### **Functional data**

Torque meter	30 Nm		
Torque motor			
Torque fail-safe	30 Nm		
Operating range Y	210 V		
Input Impedance	100 kΩ		
Position feedback U	210 V		
Position feedback U note	Max. 0.5 mA		
Position accuracy	±5%		
Direction of motion motor	selectable with switch L/R		
Direction of motion fail-safe	selectable by mounting L/R		
Manual override	by means of hand crank and locking switch		
Angle of rotation	Max. 95°		
Angle of rotation note	adjustable starting at 33% in 5% steps (with mechanical end stop)		
Running time motor	150 s / 90°		
Running time fail-safe	<20 s @ -2050°C / <60 s @ -30°C		
Sound power level, motor	45 dB(A)		
Sound power level, fail-safe	71 dB(A)		
Mechanical interface	Universal shaft clamp 1226.7 mm		
Position indication	Mechanical		
Service life	Min. 60'000 fail-safe positions		
Protection class IEC/EN	III, Safety Extra-Low Voltage (SELV)		

## Safety data

Protection class IEC/EN	III, Safety Extra-Low Voltage (SELV)		
Degree of protection IEC/EN	IP54		
EMC	CE according to 2014/30/EU		
Certification IEC/EN	IEC/EN 60730-1 and IEC/EN 60730-2-14		
Mode of operation	Type 1.AA		
Rated impulse voltage supply / control	0.8 kV		
Pollution degree	3		
Ambient humidity	Max. 95% RH, non-condensing		
Ambient temperature	-3050°C [-22122°F]		
Storage temperature	-4080°C [-40176°F]		
Servicing	maintenance-free		



Weight Weight 4.5 kg

### Safety notes



- This device has been designed for use in stationary heating, ventilation and air-conditioning
  systems and must not be used outside the specified field of application, especially in aircraft or
  in any other airborne means of transport.
- Outdoor application: only possible in case that no (sea) water, snow, ice, insolation or aggressive gases interfere directly with the device and that it is ensured that the ambient conditions remain within the thresholds according to the data sheet at any time.
- Only authorised specialists may carry out installation. All applicable legal or institutional installation regulations must be complied during installation.
- The device may only be opened at the manufacturer's site. It does not contain any parts that can be replaced or repaired by the user.
- · Cables must not be removed from the device.
- To calculate the torque required, the specifications supplied by the damper manufacturers
  concerning the cross-section, the design, the installation situation and the ventilation
  conditions must be observed.
- The device contains electrical and electronic components and must not be disposed of as household refuse. All locally valid regulations and requirements must be observed.

#### **Product features**

Mode of operation

The actuator is connected with a standard control signal of 0...10 V and moves the damper to the operating position at the same time as tensioning the return spring. The damper is turned back to the fail-safe position by spring force when the supply voltage is interrupted.

Simple direct mounting

Simple direct mounting on the damper shaft with a universal shaft clamp, supplied with an antirotation device to prevent the actuator from rotating.

Shaft stabiliser

The shaft clamp of the spring-return actuator is factory-equipped with a shaft stabiliser for the stabilisation of the combination of damper, damper shaft and actuator.

This is comprised of two plastic support rings and must be left in place, partially, or completely removed, depending on the installation situation and the shaft diameter.

Manual override

By using the hand crank the damper can be actuated manually and engaged with the locking switch at any position. Unlocking is carried out manually or automatically by applying the operating voltage.

Adjustable angle of rotation

Adjustable angle of rotation with mechanical end stops.

High functional reliability

The actuator is overload protected, requires no limit switches and automatically stops when the end stop is reached.

#### Accessories

Electrical accessories	Description	Туре
	Signal converter voltage/current 100 kΩ Supply AC/DC 24 V	Z-UIC
	Positioner for wall mounting	SGA24
	Positioner for built-in mounting	SGE24
	Positioner for front-panel mounting	SGF24
	Positioner for wall mounting	CRP24-B1
Mechanical accessories	Description	Туре
	End stop indicator	IND-EFB
	Shaft clamp reversible, clamping range Ø1226.7 mm	K9-2
	Damper crank arm Slot width 8.2 mm, clamping range Ø1425 mm	KH10
	Actuator arm Slot width 8.2 mm	KH-EFB
	Mounting kit for linkage operation for flat and side installation	ZG-EFB
	Anti-rotation mechanism 230 mm, Multipack 20 pcs.	Z-ARS230
	Hand crank 63 mm	ZKN2-B



### **Electrical installation**





Supply from isolating transformer.

Parallel connection of other actuators possible. Observe the performance data.

### Wiring diagrams

AC/DC 24 V, modulating

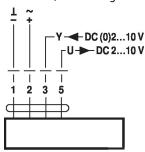

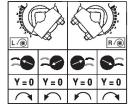

#### Cable colours:

- 1 = black
- 2 = red
- 3 = white
- 5 = orange

### **Installation notes**



The shaft stabiliser must nevertheless be used with installation of the anti-rotation device on the opposite side of the shaft clamp and a shaft diameter <20 mm.

Shaft stabiliser long shaft mounting

In the case of long shaft installation the use of the shaft stabiliser at a shaft diameter of

- 12...20 mm is necessary
- 21...26.7 mm is not necessary and can be removed


Shaft stabiliser short shaft mounting

In the case of short shaft installation, the necessity of the shaft stabiliser is dispensed with. It can be removed or – if the shaft length permits this – left in the shaft clamp.



# **Dimensions**

## Spindle length

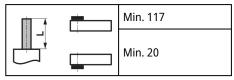

## Clamping range

